

CAUTION: ALWAYS INSTALL PRODUCT FROM LEFT TO RIGHT AND REMEMBER THAT POLYMER UNDERGOES EXPANSION/CONTRACTION DUE TO TEMPERATURE VARIATIONS. FOR A BETTER LOOK WE RECOMMEND TO INSTALL PRODUCT ON FLAT SURFACES (EX: PLYWOOD PANELS OR OSB PANELS). IF SECTIONS ARE INSTALLED ON A WALL WITH FURRINGS, FURRING STRIPS MUST BE INSTALLED OBLIQUELY AND SPACED BY 8"(20,32CM).

FRANCAIS
AU VERSO

1

2

When using Hand Laid Brick corners. When used with J-channel or outside corner.

All corner must be installed prior to installing the sections. See step 8.

3

For full length section.

Maximum 8"(20,32cm) between each nails.

4

Fasten each section at its center. For each nail.

When installing a full section, nail each extremities of the center slot first. When installing a cut section, nail in its center as shown.

5

Install sections and space mortar joints equally between two sections according to the outside temperature during the installation.

6

7

If you need to attach a section in an area other than the installation hole, create a 1"(2,54cm) long slot to allow nailing. Always nail in the middle of the slot.



8

CORNER INSTALLATION


First Hand Laid Brick corner. Next Hand Laid Brick corners.

ATTENTION: TOUJOURS INSTALLER LE PRODUIT DE LA GAUCHE VERS LA DROITE ET NE JAMAIS OUBLIER QUE LES POLYMÈRES SUBISSENT DE L'EXPANSION/CONTRACTION DUES AUX VARIATIONS DE TEMPÉRATURE. POUR UNE MEILLEURE APPARENCE, NOUS RECOMMANDONS D'INSTALLER LE PRODUIT SUR DES SURFACES PLANES (EX: PANNEAUX DE CONTRE-PLAQUE OU OSB). SI INSTALLER SUR UN MUR LATTE, INSTALLER LES LATTES À L'OBLIQUE ET AUX 8" (20,32CM).


ENGLISH ON
REVERSE

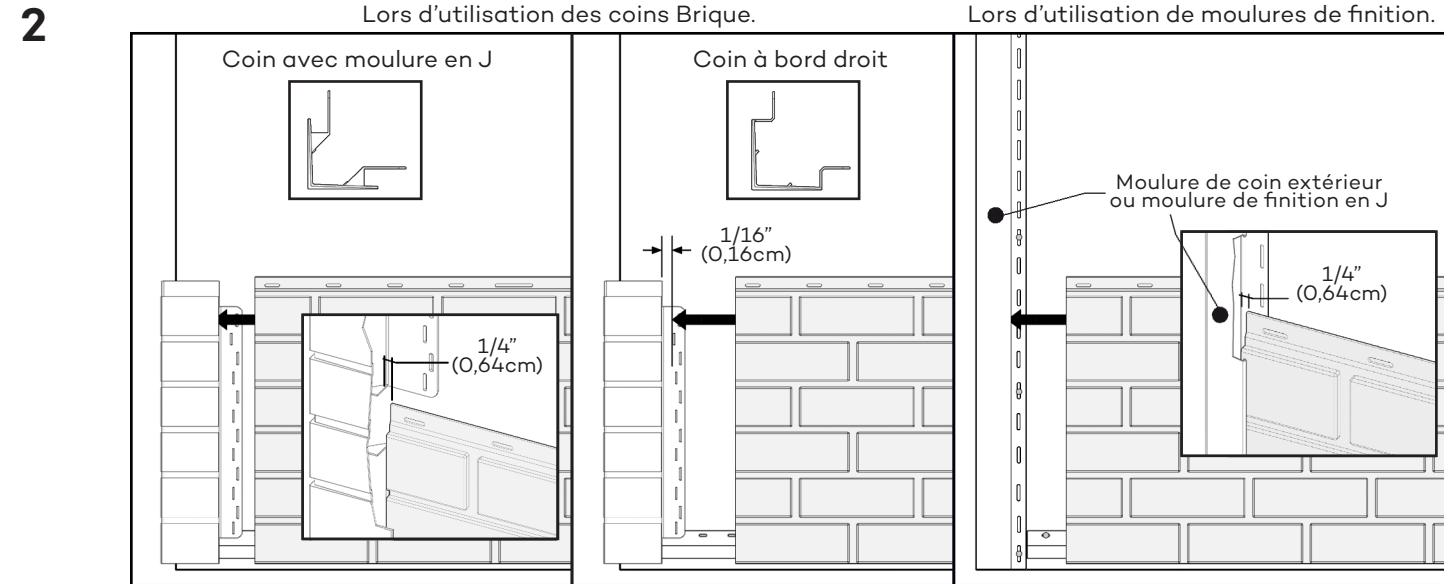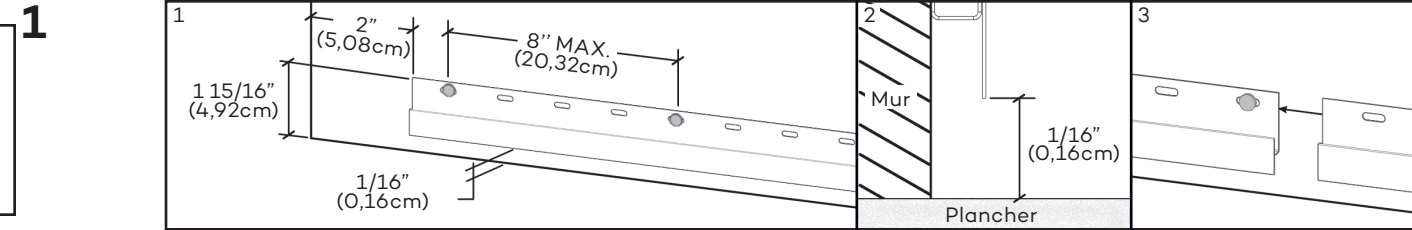

Tous les types de coins doivent être installés avant de débuter l'installation des sections.


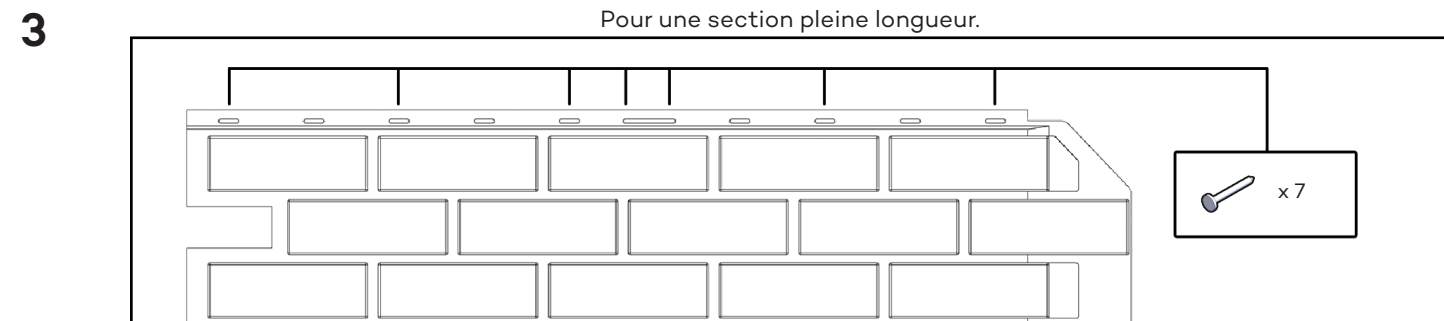


8" (20,32cm) maximum entre chaque clous.


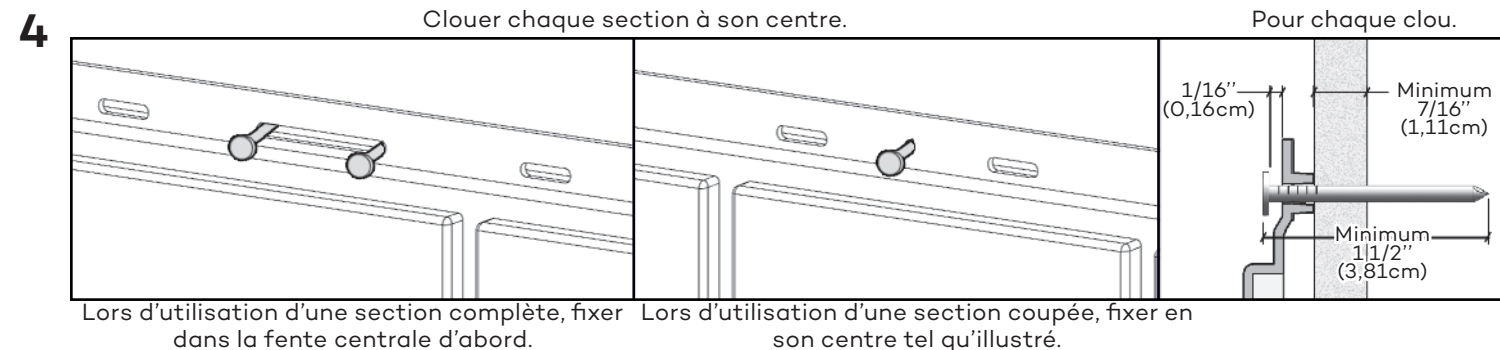


5

Installer les sections à distance égale pour obtenir des joints de mortier de dimensions similaires entre les sections selon la température extérieure lors de l'installation.

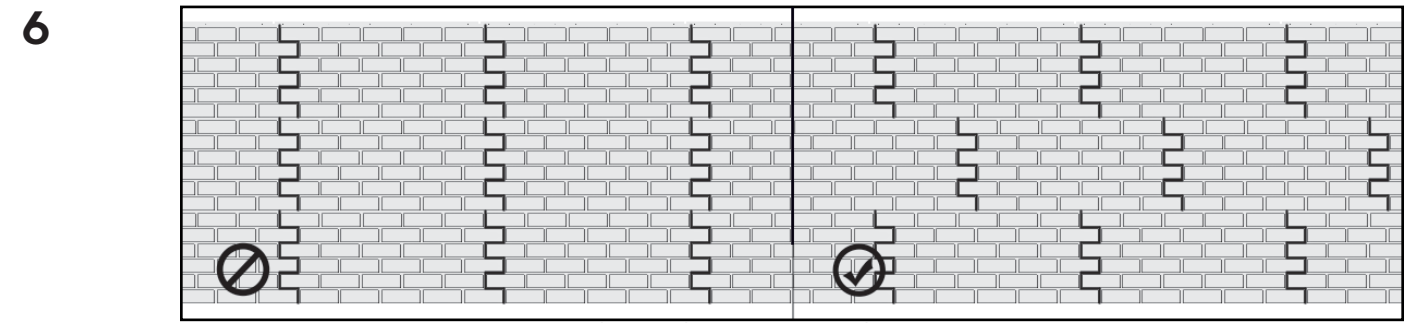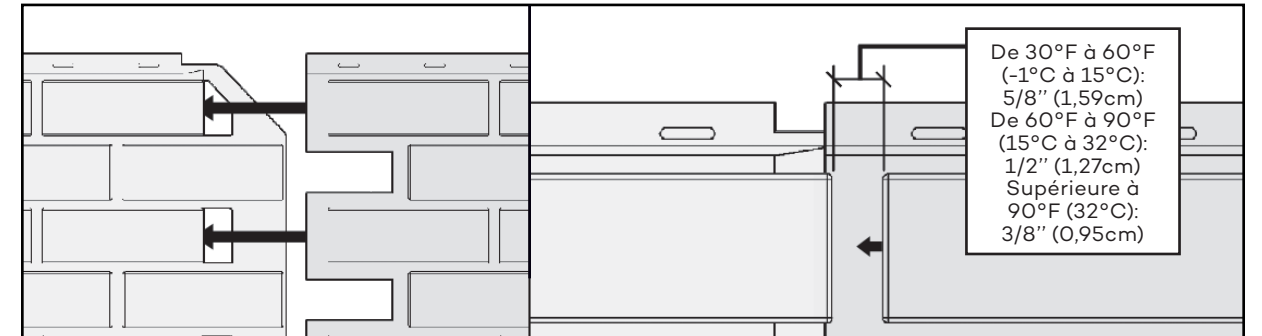

Alternar les joints entre les rangées.

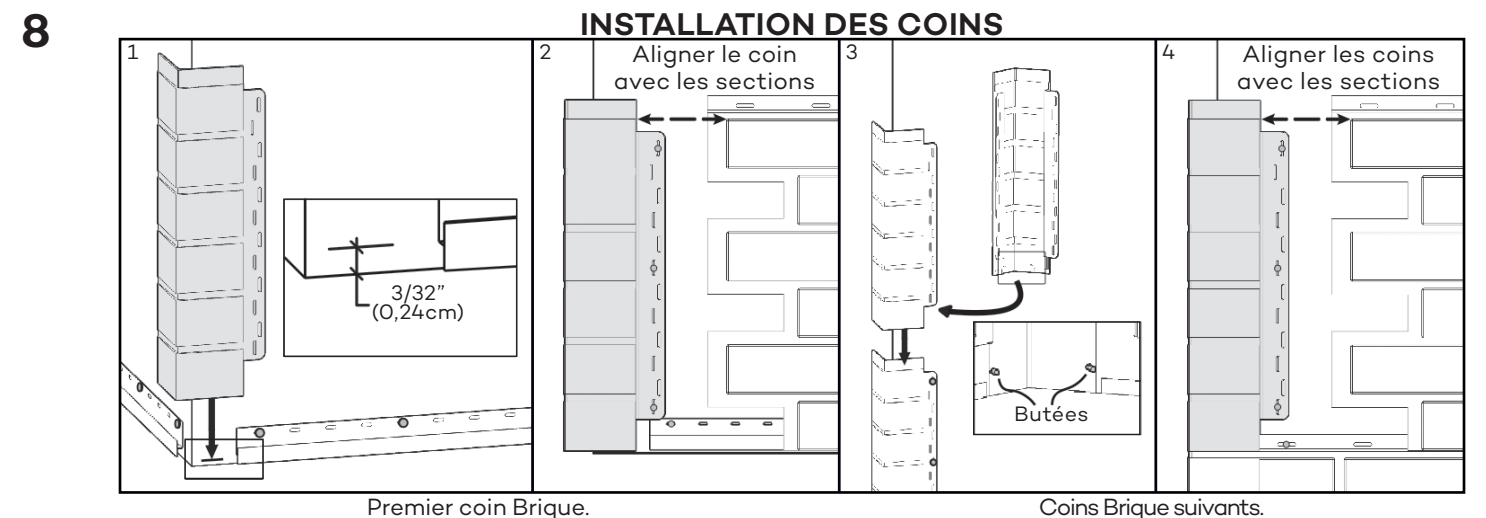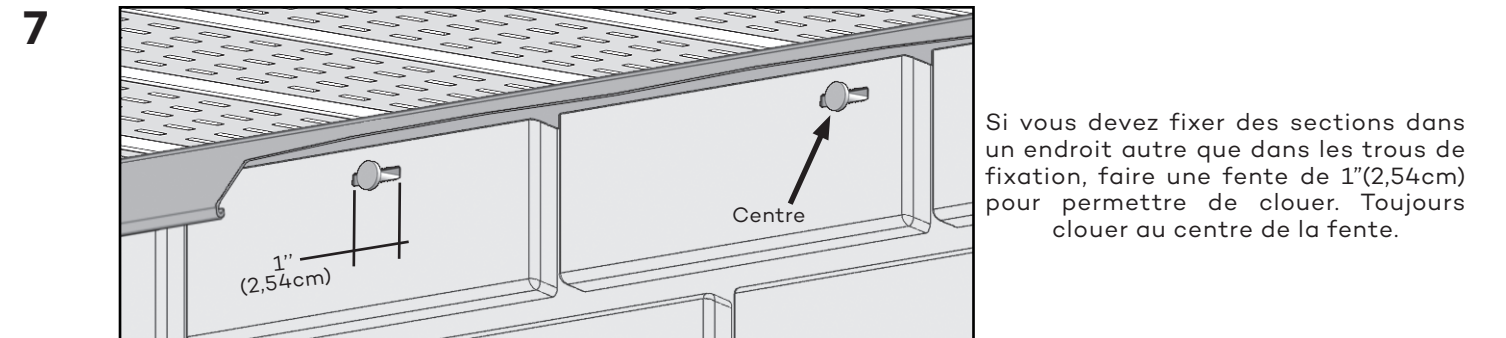

Premier coin Brique.

Coin Brique suivants.