


NEW

GRACE
PESDs®

EZ-UPGRADE VOLTAGE TEST STATION KIT

You can now easily upgrade your standalone Voltage Indicator (R-3W Series) or Safe-Test Point™ (R-3MT Series) into an all-in-one Voltage Test Station (VTS) or a labeled combination unit with our **NEW EZ-Upgrade Voltage Test Station Kit**.

Our GracePESDs® VTS (with protective housing) and Combination Units (without protective housing) provide LED indication when voltage is present and have been making absence of voltage testing safer and more productive for years. With our new design, you can upgrade to the VTS or combination unit in no time to maximize electrical safety at each location. Here's how it works:

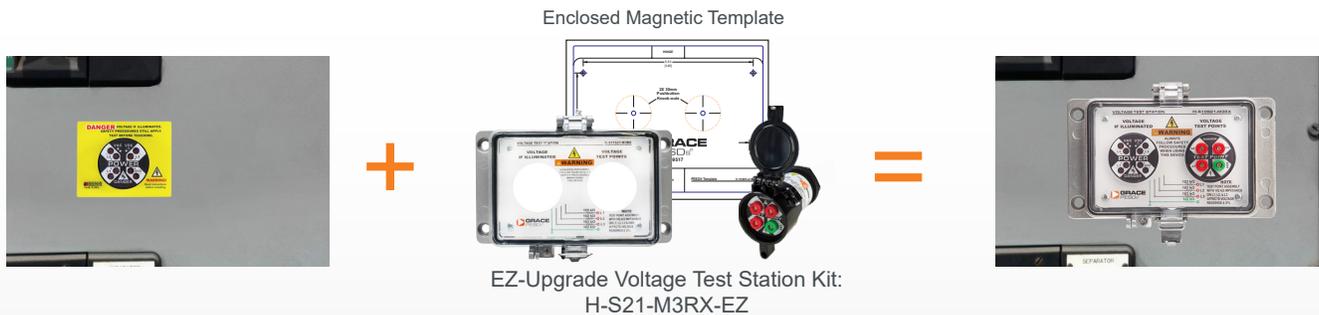

1

Identify the right upgrade kit for your application. Have a R-3W Series Voltage Indicator? Upgrade to include the Safe-Test Point™ or if you have a Safe-Test Point™; upgrade to include a R-3W Series Voltage Indicator.

2

Identify if you need a protective housing or just the additional unit and safety label and select your part number. Contact your local Sales Representative for additional assistance.

3

We will ship you the EZ-Upgrade Kit tailored for your application and install.

Your kit will include: a detailed, magnetic installation template indicating knockout and bolted connection points.


Now you can pre-verify presence of voltage and test for absence of voltage in one place! Customers have reported that with the addition of a VTS or labeled combination unit they have reduced their Lockout/Tagout (LOTO) procedures from a 30-minute process down to just a 5-minute task. Request a sample today! See the back for a listing of possible part numbers.

GRACE
TECHNOLOGIES

sales@gracetechnologies.com • www.pesd.com • 1.800.280.9517

NEW EZ-UPGRADE VOLTAGE TEST STATION KITS

Upgrade to a Voltage Test Station (VTS) or Combination Unit using our EZ-Upgrade Kit. See below for your upgrade options.

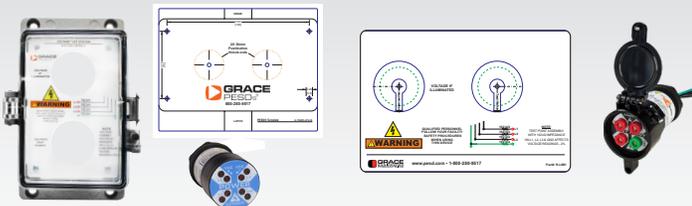

H-S11-M3RX-EZ-V

R-3MT-EZ-H

| Product Number | Description |
|-----------------------------------|--|
| H-S10-M3RX-EZ H-S10-M3RX-EZ-V* | R-3W Voltage Indicator, Protective Housing and Magnetic Installation Template (unassembled kit) |
| H-S11-M3RX-EZ H-S11-M3RX-EZ-V* | R-3W2 Voltage Indicator, Protective Housing and Magnetic Installation Template (unassembled kit) |
| H-S12-M3RX-EZ H-S12-M3RX-EZ-V* | R-3W-SR Voltage Indicator, Protective Housing and Magnetic Installation Template (unassembled kit) |
| H-S21-M3RX-EZ H-S21-M3RX-EZ-V* | Safe-Test Point™, Protective Housing and Magnetic Installation Template (unassembled kit) |
| R-3MT-EZ-H R-3MT-EZ-F | Safe-Test Point™, Combo Label and Magnetic Installation Template (unassembled kit) |
| R-3W-EZ-H R-3W-EZ-F | R-3W Voltage Indicator, Combo Label and Magnetic Installation Template (unassembled kit) |

UL Type 4 shown, other UL type housings are available. Contact your local Sales Representative for more information.

*Part numbers starting with H are units that come with a protective housing.

*Part numbers ending in V are vertical mount units.

Burnie & Les

